

TLK 35 MICROPROCESSOR-BASED DIGITAL ELECTRONIC REGULATOR

TECHNICAL DATA

CARATTERISTICHE MECCANICHE	
Housing	Self-extinguishing plastic, UL 94 V0
Dimensions	70x84 mm (4 DIN modules) – depth 60 mm
Weight	180 g approx.
Connections	2,5 mm ² screw terminal block
Mounting	Backboard on OMEGA DIN rail
ELECTRICAL DATA	
Power supply	24 VAC/VDC, 100...240 VAC +/-10%
AC Frequency	50 / 60 Hz
Power consumption	5 VA approx.
INPUT DATA	
Thermocouple	J, K, S – According to IEC 584-2 accuracy class 1 or 2
Thermoresistance	Pt 100 – According to IEC 751 accuracy class A or B
Infrared sensors	TECNOLOGIC IRS J and K
Thermistor	PTC KTY 81-121 (990 Ω at 25°C) ; NTC 103AT-2 (10 kΩ at 25°C)
Current input	0/4...20 mA
Voltage input	0...50 mV, 0...60 mV, 12...60 mV, 0/1...5 V, 0/2...10 V
Digital input	2 digital inputs for free voltage contacts
Normalized signals input impedance	0/4...20 mA: 51 Ω mV and V: 1 MΩ
OUTPUT DATA	
Relay outputs	Up to 3 outputs: OUT1 and OUT2: SPST-NO (8 A-AC1, 3 A-AC3 / 250 VAC) OUT3: SPST-NO (5A-AC1, 2A-AC3 250 VAC)
Voltage output for SSR driving	8 mA at 8 VDC with protection against short circuits
Auxiliary power supply output	10 VDC / 20 mA max
Relay electrical life	100000 oper.
FUNCTIONAL DATA	
Control	ON/OFF, Neutral Zone, PID single and double action programmable
Overall accuracy	+/-0.5% fs
Display resolution	According to the used probe 1/0,1/0,01/0,001
Measurement range	According to the used probe and to the measurement unit
Unit of measurement	°C - °F, programmable
Measure sampling time	130 ms
Serial communication	RS485 with MODBUS-RTU (JBUS) protocol
Serial transmission speed (baud-rate)	1200...38400 baud, programmable
Display	4 digit red h=12 mm
Parameters access	Protected by password
Operating temperature	0...55°C
Operating humidity	30...95 RH% without condensation

MEASUREMENT RANGE

PROBE	RANGE 4 DIGIT	RANGE 4 DIGIT with D.P.
tc J SEnS = J	0 ... 1000°C 32 ... 1832°F	---
tc K SEnS = CrAl	0 ... 1370°C 32 ... 2498°F	---
tc S SEnS = S	0 ... 1760°C 32 ... 3200°F	---
Pt 100 SEnS = Pt1	-200 ... 850°C -328 ... 1562°F	-199.9 ... 850.0°C -199.9 ... 999.9°F
PTC SEnS = Ptc	-55 ... 150°C -67 ... 302°F	-55.0 ... 150.0°C -58.0 ... 999.9°F
NTC SEnS = ntc	-50 ... 110°C -58 ... 230°F	-50.0 ... 110.0°C -58.0 ... 230.0°F
0...20 mA SEnS = 0.20	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
4...20 mA SEnS = 4.20	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999

PROBE	RANGE 4 DIGIT	RANGE 4 DIGIT with D.P.
0...50 mV SEnS = 4.20	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
0...60 mV SEnS = 0.60	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
12...60 mV SEnS = 12.60	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
0...1V SEnS = 0.1	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
0...5 V SEnS = 0.5	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
1...5 V SEnS = 1.5	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
0...10 V SEnS = 0.10	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999
2...10 V SEnS = 2.10	-1999 ... 9999	-199.9 ... 999.9 -19.99 ... 99.99 -1.999 ... 9.999

ALARM OUTPUTS

The alarm functioning is depending on the Process Value and it's programmable through a 4 figures code; depending on the value of the suitable parameters, it's possible to have 6 different types of alarms :

	Alarm type	Alarm output
1	Absolute Low alarm: it's activated when the Process Value is lower than the alarm threshold	
2	Absolute High alarm: it's activated when the Process Value is higher than the alarm threshold	
3	Absolute Low band alarm: it's activated when the Process Value is lower than the low alarm threshold or higher than the high threshold alarm	
4	Low Deviation alarm: it's activated when the Process Value is lower than (SetP+ low threshold)	
5	High Deviation alarm: it's activated when the Process Value is higher than (SetP+ high threshold)	
6	Deviation band alarm: it's activated when the Process Value is lower than (SetP+ low threshold) and higher than (SetP+ high threshold)	

Alarms hysteresis


The alarms functioning is influenced by the hysteresis phenomenon which works asymmetrically. In case of low alarm, the alarm is activated when the Process Value goes under the threshold alarm and it's deactivated when the Process Value goes upper than the alarm threshold; in case of high alarm, it's viceversa.

LOOP BREAK alarm function

The LB alarm is needed to signalise the interruption of the control loop, because of a thermocouple shortcircuit or inversion or interruption of the load.

RAMP FUNCTION

The function of ramp and fall it's needed to reach the Set Point value within a predefined time, which has to be programmed in advance and has to be necessarily longer than the one of the process controlled. The meaning of this function is not to place under thermal stress the treated materials. Once the instrument has reached the first Set Point (SP1) it's possible to have the automatic commutation on the second Set Point (SP2) after a programmed time, with a simple automatic cycle. That function is available for all the programmable control types.

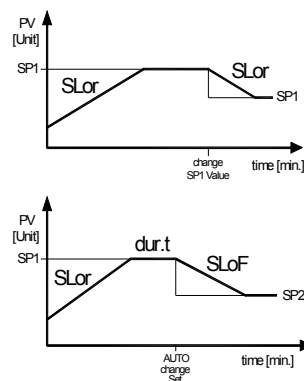


CONTROL MODE FEATURES

ON / OFF CONTROL

This control works on output 1rEG, depending on the Set Point, on the functioning mode and on the hysteresis programmed. The control is symmetrical or asymmetrical. Symmetrical means that the output is ON until when the Process Value has reached (SP+hysteresis) or when has reached (SP-hysteresis). Asymmetrical means that the output is ON up to the reaching of the Set Point, to become again ON when it has reached (SP-hysteresis).


NEUTRAL ZONE CONTROL

This type of control concerns both outputs and it is used to control a plant which is equipped with a heating and a refrigerant element. This control works on the outputs depending on the measure, on the Set Point and on the hysteresis programmed.

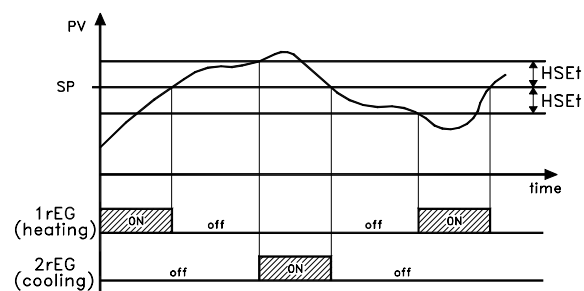

PID CONTROL

The PID control works with a particular algorithm with **two degrees of freedom** that optimises, in independent way, the features of the instrument, in case of process noises and Set Point variations.

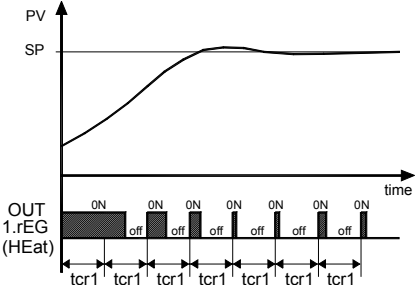PID CONTROL - Single action	PID CONTROL - Double action
<p>The single action PID control works on the output 1rEG depending on the active Set Point, on the functioning mode and on the instrument's PID algorithm with two degrees of freedom.</p> 	<p>The double action PID is obtainable when 2 outputs are programmed respectively 1rEG and 2rEG and is used to control plants where there is an element which causes a positive increment (ex. Heating) and an element which causes a negative increment (ex. Cooling). This type of control works on the outputs 1rEG and 2rEG depending on the active Set Point and on the instrument's PID algorithm with two degrees of freedom.</p>
PARAMETERS PROGRAMMING	PARAMETERS PROGRAMMING
Proportional band 0 ... 9999	Proportional band 0 ... 9999
Manual reset -100.0 ... 100.0%	Manual reset -100.0 ... 100.0%
Output 1rEG cycle time 0.1 ... 130.0 s	Output 1rEG cycle time 0.1 ... 130.0 s
Integral action time OFF ... 9999 s	Output 2rEG cycle time 0.1 ... 130.0 s
Derivative action time OFF ... 9999 s	Integral action time OFF ... 9999 s
Fuzzy Overshoot Control 0.00 ... 2.00	Derivative action time OFF ... 9999 s
	Fuzzy Overshoot Control 0.00 ... 2.00
	Prat: Ratio between cooling power and heating power
<p>The parameter Fuzzy Overshoot Control permits to avoid the variable overshoots at the start up of the process or at the changing of the Set Point.</p>	
AUTOTUNING FUNCTION	
<p>This function permits to automatically tune the PID parameters, after the Set Point programming. The calculated values are automatically stored, at the end of the Autotuning cycle, into the PID parameters. That function permits the PID parameters calculation through a tuning cycle FS type and, at the end of this operation, the parameters are stored into the instrument's memory and remain constants during the control. The Autotuning cycle duration has been limited at 12 hours maximum.</p>	
SELFTUNING FUNCTION	
<p>It's an algorithm that permits to calculate the PID parameters during the control. It has the meaning to correct the control errors caused by the process variations. It's type "rule based TUNE-IN" and automatically recognises the type of noise and works in order to optimise the control, reducing as much as possible the oscillations.</p>	
SOFT-START FUNCTION	
<p>That function is only working with PID control and allows the limiting of the control power when the instrument is switched on, for a programmable time. This is useful when the actuator, driver by instrument, could be damaged by power too high supplied when the application is not yet in the normal rating. When the Soft-Start is active, it's not possible to execute the Autotuning, because it may gives an excessive power.</p>	
RS 485 SERIAL INTERFACE	
<p>The serial interface RS 485 permits to connect the instrument into a net on which are presents regulators or PLC all depending typically on a supervisor. Through this system it's possible to centralise all the information, to modify the working conditions, to store data. The software protocol adopted is a derivative from the MODBUS RTU or JBUS protocol (AEG Schneider Automation, Inc. Trade Mark)</p>	

HOST (PC/PLC)

RS485 Interface

shield

Rt 120 ohm

TLK35 n.1 TLK35 n.2 TLK35 n.N


ADVANTAGES FOR THE USERS

- To monitor and store all the variables and alarms of the plant managed by the instruments
- To create and print tables and graphics relative to the historical trend of the measured variables
- To modify the Set Point value and the parameters programming
- To operate remotely as well as locally
- To connect up to 32 instruments on the same net


PARAMETERS CONFIGURATION WITH KEY 01

The instrument parameters can be loaded and/or downloaded through the KEY01 by means of a 5 pole connector. The KEY01 is used to program more instruments with the same parameters or to obtain a copy of the programming.

MECHANICAL DIMENSIONS (mm)

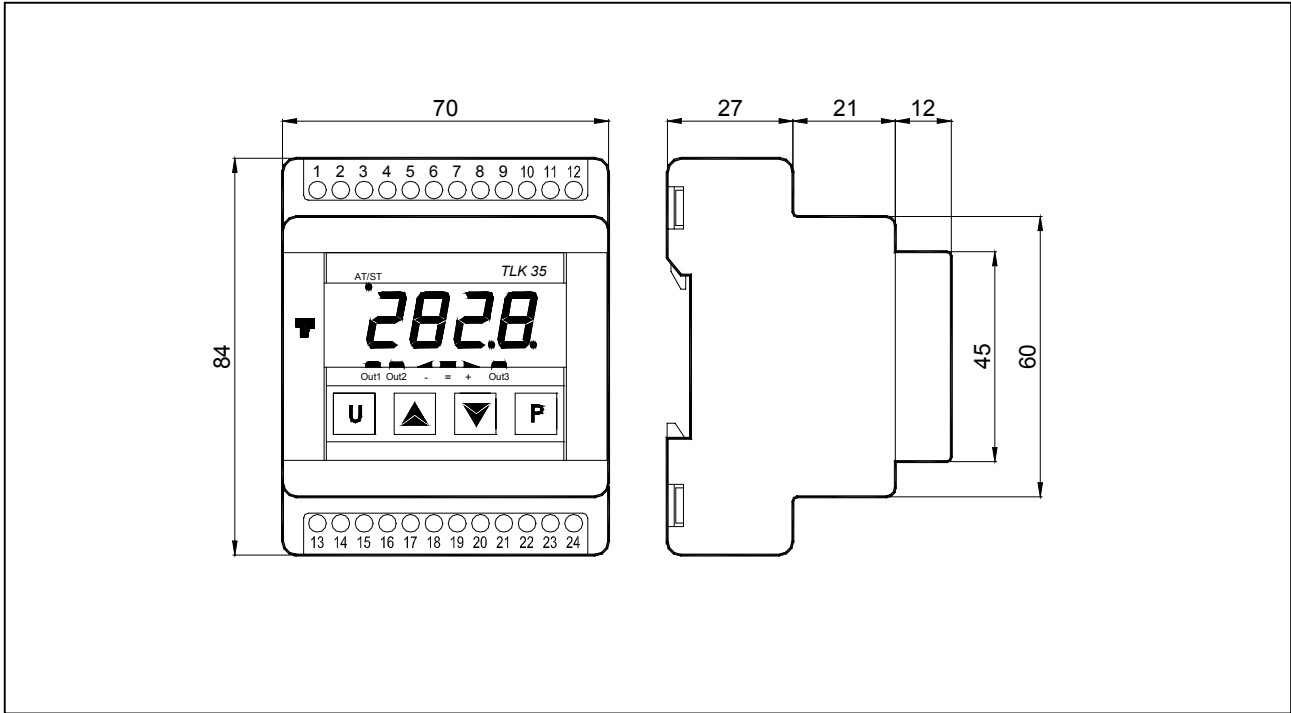


FRONT PANEL DESCRIPTION

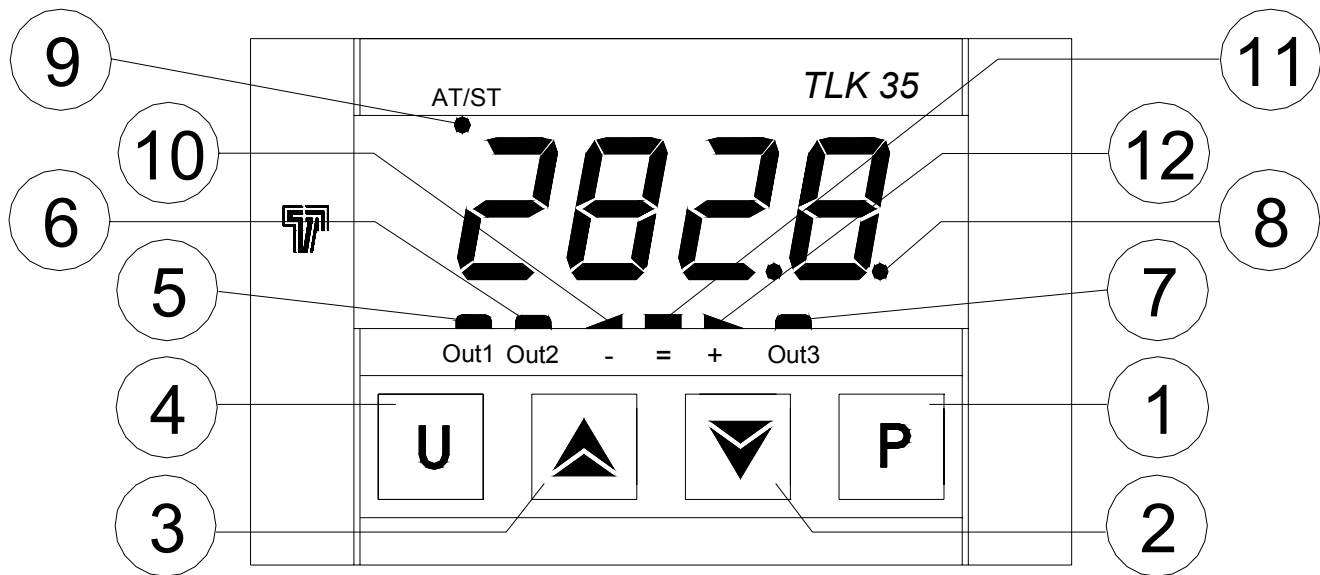

1 - Key P	It's used to get into the parameters programming and to confirm the programmed parameter.	7 - Led OUT3	Lighted, it signals that output OUT3 is active.
2 - Key DOWN	In the programming phase, it decreases of one unit the figure on which it's located the slider. If the key is held down, the user returns to the previous programming level until he exits the programming mode..	8 - Led SET	Lighted, it signals the input in programming mode.
3 - Key UP	In the programming phase, it increases of one unit the figure on which it's located the slider. In the normal functioning, it visualises the output control power.	9 - Led AT/ST	If it's flashing, the instrument is executing the AUTO-TUNING. If it's permanently lighted the instrument is executing the SELF-TUNING.
4 - Key U	Key with function programmable as: Activate Autotuning and Selftuning functions, swap the instrument into manual control, aknowledge the alarm, change the active Set Point, deactivate the control.	10 - Led (-) Shift index	It indicates that the process value is lower than as programmed Set.
5 - Led OUT1	Lighted, it signals that output OUT1 is active.	11 - Led (=) Shift index	It indicates that the process value is within the programmed range.
6 - Led OUT2	Lighted, it signals that output OUT2 is active.	12 - Led (+) Shift index	It indicates that the process value is higher than as programmed Set.

CONNECTIONS DIAGRAM

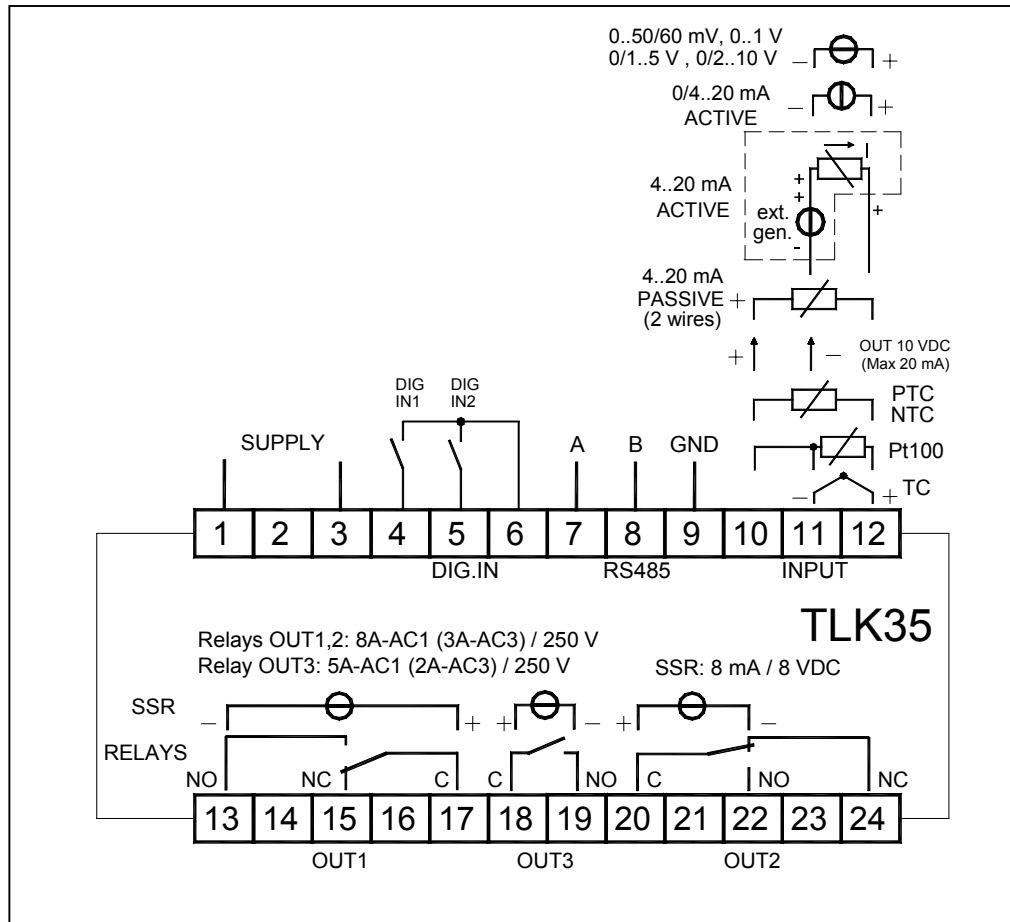

CERTIFICATIONS AND CONFORMITY

- ▲ CE Conformity: CEE EMC 89/36 (EN 61326)
CEE LT 73/23 and 93/68 (EN 61010-1)
- ▲ UL Conformity: File n. E 206847

GESINT S.r.l. - Via Perosi, 5 - 20010 Bareggio (MI) - ITALY
Tel. +39-02-9014633 / +39-335-6282615 - Fax +39-02-90362295
WWW.GESINTSRL.IT - E-mail: info@gesintsrl.it